Aspire 5515 Series

Quick Guide

Copyright © 2008. Acer Incorporated. All Rights Reserved.

Aspire 5515 Series Quick Guide Original Issue: 12/2008

This company makes no representations or warranties, either express or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose. Although care has been taken to ensure accuracy, this company shall not be liable for any errors (including, but not limited to, typos, factual errors, etc.) contained in this publication.

Changes may be made periodically to the information in this publication without obligation to notify any person of such revisions or changes. Such changes will be incorporated in new editions of this manual or supplementary documents and publications. This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose.

Record the model number, serial number, purchase date and place of purchase information in the space provided below. The serial number and model number are recorded on the label affixed to your computer. All correspondence concerning your unit should include the serial number, model number and purchase information.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronically, mechanically, by photocopy, recording or otherwise, without the prior written permission of Acer Incorporated.

Aspire 5515 Series Notebook PC

Model number:

Serial number:

Date of purchase:

Place of purchase:

Acer and the Acer logo are registered trademarks of Acer Incorporated. Other companies' product names or trademarks are used herein for identification purposes only and belong to their respective companies.

First things first

We would like to thank you for making an Acer notebook your choice for meeting your mobile computing needs.

Your guides

To help you use your Acer notebook, we have designed a set of guides:

First off, the Just for Starters... poster helps you get started with setting up your computer.

The Aspire Series Generic User Guide contains useful information applying to all models in the Aspire product series. It covers basic topics such as Acer's Empowering Technology, using the keyboard, audio, etc. Please understand that due to its nature, the **Generic User Guide** as well as the **AcerSystem User Guide** mentioned below will occasionally refer to functions or features which are only contained in certain models of the series, but not necessarily in the model you purchased. Such instances are marked in the text with language such as "only for certain models".

The **Quick Guide** introduces you to the basic features and functions of your new computer. For more on how your computer can help you to be more productive, please refer to the AcerSystem User Guide. This guide contains detailed information on such subjects as system utilities, data recovery, expansion options and troubleshooting. In addition it contains warranty information and the general regulations and safety notices for your notebook. It is available in Portable Document Format (PDF) and comes preloaded on your notebook. Follow these steps to access it:

1 Click on Start, All Programs, AcerSystem.

2 Click on AcerSystem User Guide.




Note: Viewing the file requires Adobe Reader. If Adobe Reader is not installed on your computer, clicking on AcerSystem User Guide will run the Adobe Reader setup program first. Follow the instructions on the screen to complete the installation. For instructions on how to use Adobe Reader, access the Help and Support menu.

Your Acer notebook tour

After setting up your computer as illustrated in the **Just for Starters...** poster, let us show you around your new Acer notebook.

Top view

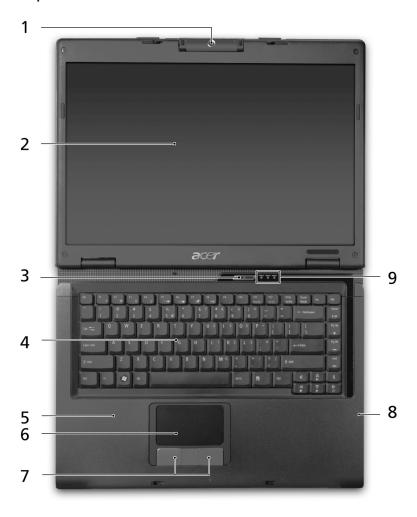

| # | lcon | Item | Description |
|---|------|----------------------|--|
| 1 | | Integrated webcam | Web camera for video communication. (only for certain models) |

| # | Icon | Item | Description |
|---|-------------|--------------------------------|--|
| 2 | | Display screen | Also called Liquid-Crystal Display (LCD), displays computer output. |
| 3 | Ф | Power button | Turns the computer on and off. |
| 4 | | Keyboard | For entering data into your computer. |
| 5 | | Palmrest | Comfortable support area for your hands when you use the computer. |
| 6 | | Touchpad | Touch-sensitive pointing device which functions like a computer mouse. |
| 7 | | Click buttons (left and right) | The left and right buttons function like the left and right mouse buttons. |
| 8 | 100 | Microphone | Internal microphone for sound recording. |
| 9 | > | HDD | Indicates when the hard disk drive is active. |
| | A | Caps Lock | Lights up when Caps Lock is activated. |
| | 1 | Num Lock | Lights up when Num Lock is activated. |

Closed front view



| # | Icon | Item | Description |
|---|------|---|---|
| 1 | | Speakers | Left and right speakers deliver stereo audio output. |
| 2 | | Latch | Locks and releases the lid. |
| 3 | Ö | Wireless LAN communication button/indicator | Enables/disables the wireless LAN function. Indicates the status of wireless LAN communication. |
| 4 | * | Power ¹ | Indicates the computer's power status. |
| 5 | Ē | Battery ¹ | Indicates the computer's battlery status. 1. Charging: The light shows amber when the battery is charging. 2. Fully charged: The light shows green when in AC mode. |
| 6 | 100 | Microphone-in jack | Accepts input from external microphones. |
| 7 | ဂ | Headphones/ speaker/line- out jack | Connects to audio line-out devices (e.g., speakers, headphones). |

^{1.} The front panel indicators are visible even when the computer cover is closed up.

Rear view



| # | lcon | Item | Description |
|---|--------------|--------------------------------|---|
| 1 | | DC-in jack | Connects to an AC adapter. |
| 2 | | External display (VGA) port | Connects to a display device (e.g., external monitor, LCD projector). |
| 3 | ● ✓•+ | USB 2.0 port | Connect to USB 2.0 devices (e.g., USB mouse, USB camera). |
| 4 | | Ventilation slots | Enable the computer to stay cool, even after prolonged use. |

Left view




| # | Icon | Item | Description |
|---|--------------|-----------------------|---|
| 1 | ĸ | Kensington lock slot | Connects to a Kensington-compatible computer security lock. |
| | | | Note: Wrap the computer security lock cable around an immovable object such as a table or handle of a locked drawer. Insert the lock into the notch and turn the key to secure the lock. Some keyless models are also available. |
| 2 | | Ventilation slots | Enable the computer to stay cool, even after prolonged use. |
| 3 | ● ✓•+ | USB 2.0 port | Connect to USB 2.0 devices (e.g., USB mouse, USB camera). |
| 4 | 용 | Ethernet (RJ-45) port | Connects to an Ethernet 10/100-based network. |

Right view



| # | Item | Description | |
|---|----------------------------|--|--|
| 1 | Optical drive | Internal optical drive; accepts CDs or DVDs | |
| 2 Optical disk Lights up when the optical drive is active. access indicator | | Lights up when the optical drive is active. | |
| 3 | Optical drive eject button | Ejects the optical disk from the drive. | |
| 4 | Emergency eject hole | Ejects the optical drive tray when the computer is turned off. | |
| | | Note: Insert a paper clip to the emergency eject hole to eject the optical drive tray when the computer is off. | |

Base view

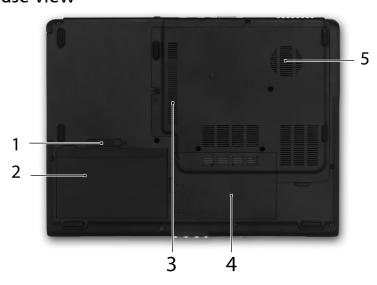

| # | lcon | Item | Description |
|---|----------|-----------------------------------|--|
| 1 | <u> </u> | Battery bay | Houses the computer's battery pack. |
| 2 | <u>+</u> | Battery release latch | Releases the battery for removal. |
| 3 | | Memory compartment | Houses the computer's main memory. |
| 4 | | Hard disk bay | Houses the computer's hard disk (secured with screws). |
| 5 | | Ventilation slots and cooling fan | Enable the computer to stay cool, even after prolonged use. Note : Do not cover or obstruct the opening of the fan. |

Specifications

| Operating | Canuina Win | ndows Vista® |
|------------------------------------|----------------------------|------------------------------------|
| system | Genuine wir | Idows vistaw |
| Platform | AMD Athlon | 2650e* processor or higher |
| FIGUIOIII | | • |
| | | MC/SB600 Chipset |
| | IEEE 802.11b | <u> </u> |
| System memory | Dual-channe | • • • |
| | • | f DDR2 667 MHz memory, upgradeable |
| | to 4 GB using | g two soDIMM modules |
| Display | 15.4" WXGA | 1280 x 800 |
| Graphics | ATI Radeon ^T | M Xpress 1200 Graphics |
| Storage | 2.5" hard dis | k drive |
| subsystem | Optical drive | option: |
| | | per Multi double-layer drive* |
| | DVD/CD | -RW combo drive* |
| Audio | Two built-in | stereo speakers |
| | High-definit | on audio support |
| | MS-Sound co | ompatible |
| | Built-in micre | ophone |
| Communication • Integrated webcam* | | /ebcam* |
| | WLAN: IEEE | 802.11b/g |
| | LAN: Fast Eth | nernet; Wake-on-LAN ready |
| Dimensions | 358 (W) x 26 | 9 (D) x 29.8/33.8(H) mm |
| | • • | (1.17/1.33 inches) |
| | 2.8 kg (6.18 | bs.) with 6 cell battery pack |
| Privacy control | BIOS user, su | pervisor, HDD passwords |
| • | Kensington l | |
| Power | ACPI 3.0 | |
| subsystem | 48.8 W 4400 | mAh |
| | 3-pin 65 W A | AC adapter |
| Special keys | 88-/89-key ke | evboard |
| and controls | Touchpad pointing device | |
| I/O interface | USB 2.0 port | |
| | External disp | olay (VGA) port |
| | | /speaker/line-out jack |
| | Microphone | in jack |
| | Ethernet (RJ | • |
| | • | or AC adapter |
| - | , | ' |

Environment Temperature:

- Operating: 5 °C to 35 °C Non-operating: -20 °C to 65 °C
- Humidity (non-condensing):
 - Operating: 20% to 80% Non-operating: 20% to 80%



Note: * Only for certain models.



Note: The specifications listed above are for reference only. The exact configuration of your PC depends on the model purchased.